

1. Maintenance Tools

1-1 List of Maintenance Tools

Item Name	Item Number	Purpose	Remarks
Alignment Tape, (Color bar master/PAL)	DY9-1381-000	Recorder electrical adjustment	
Alignment Tape (tracking)	DY9-1345-000	Running adjustment	DMC III
Cassette Torque Gauge for DV	DY9-1346-000	Running adjustment	DMC III
Driver bit for tape path adjustment	DY9-2053-000	Running adjustment	DMC III
DV Cleaning Tape (hard)	DY9-1384-000	Head cleaning	DMC III
Color bar chart	DY9-2002-000	Camera electrical adjustment	
Color Viewer 5600° K for 220V	DY9-2039-220	Camera electrical adjustment (JPN) (for 220)	
Color Viewer 5600° K for 240V	DY9-2039-240	Camera electrical adjustment (USA) (for 240)	
Lamp for Color Viewer 5600K	DY9-2040-000		Replacement parts
Filter, CCA W12ø46mm	DY9-2046-000	Camera electrical adjustment	
Wireless remote controller	—————	Service mode	Except for WL-4000 and WL-D83
Cassette for changeover to service mode	DY9-1386-000	Service mode	
Extension Flexible cable (24pin)	DY9-1390-000	Test pin extended	
Standard Lens	DY9-1360-000	Check and adjustment of a flange back.	
Green Filter	DY9-1361-000	Check and adjustment of a flange back.	

3-3 How to Operate Wireless Remote Controller in Service Mode

(1) To use the wireless remote controller in the service mode, set it at Remote controller code 2.

* To changeover to Remote controller code 2, press the "Remote controller setting" and "Zoom T" keys simultaneously for 2 sec. (The WL-D4000, bundled with this product, does not have the "1. AUDIO DUBBING" key. Use a previous type of wireless remote controller that is equipped with an AUDIO DUBBING key function.)

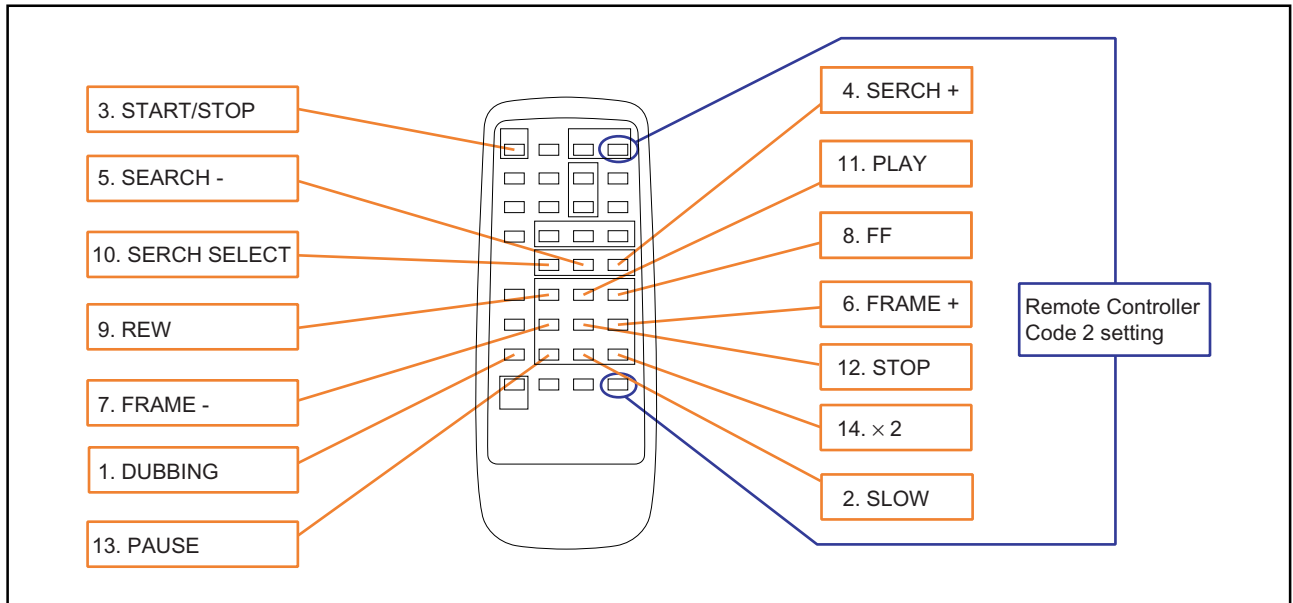


Fig. 6

No.	Key Designation (in Normal Mode)	Key Designation (in Service Mode)	Function
1	DUBBING	SERVICE MODE	Change over to service mode
2	SLOW	NORMAL MODE	Change over to normal mode
3	START/STOP	CS+	Increases CS by 1.
4	SEARCH +	FUNCTION +	Increases FUNCTION by 1.
5	SEARCH -	FUNCTION -	Decreases FUNCTION by 1.
6	FRAME +	HIGH ADDRESS +	Increases HIGH ADDRESS by 1.
7	FRAME -	HIGH ADDRESS -	Decreases HIGH ADDRESS by 1.
8	FF	ADDRESS +	Increases ADDRESS by 1.
9	REW	ADDRESS -	Decreases ADDRESS by 1.
10	SEARCH SELECT	MODE SELECT	Change over to RD/WR mode
11	PLAY	DATA +	Increases DATA by 1.
12	STOP	DATA -	Decreases DATA by 1.
13	PAUSE	STORE	Defines/writes DATA.
14	x2	EJECT	Performs EJECT.